


Free Residual Chlorine ClO^- No.222

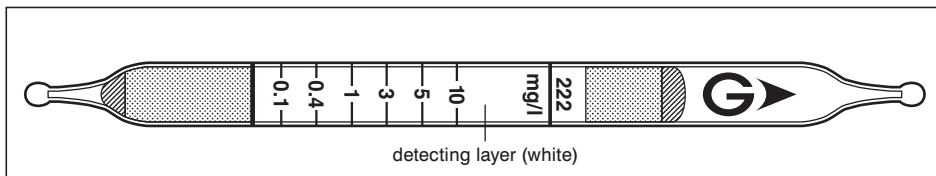

Performance

Measuring range	0.1 to 10 mg/l
Sampling time	4 minutes
Detecting limit :	0.05 mg/l
Colour change :	White → Reddish Orange
Corrections for water temperature :	Unnecessary (5 – 40°C)
pH value :	pH 4.0 – pH 10.0
Relative standard deviation :	15 % (for 0.1 to 1 mg/l), 10 % (for 1 to 10 mg/l)
Shelf life :	2 years

Reaction principle

Free Chlorine + 3,3',5,5'-Tetramethylbezidine → Reddish Orange reaction product

Possible coexisting substances and their interferences

Substance	Concentration	Interference	Changes colour by itself to
NO_2^-	$\geq 0.3 \text{ mg/l}$	—	No
NH_4^+	$\geq 0.1 \text{ mg/l}$	—	No
Cl^-	$\geq 30 \text{ mg/l}$	—	No
NO_3^-	$\geq 50 \text{ mg/l}$	—	No
SO_4^{2-}	$\geq 30 \text{ mg/l}$	—	No
PO_4^{3-}	$\geq 20 \text{ mg/l}$	—	No

Calibration method

Free Residual Chlorine solution